


9
7
3
-
4
5
5
-
8
8
0
4

DRFIBERGLASS.COM

Deck preparation guidelines

Temporary
2" x 4" to allow
1" lip of fiberglass
(for Decking)

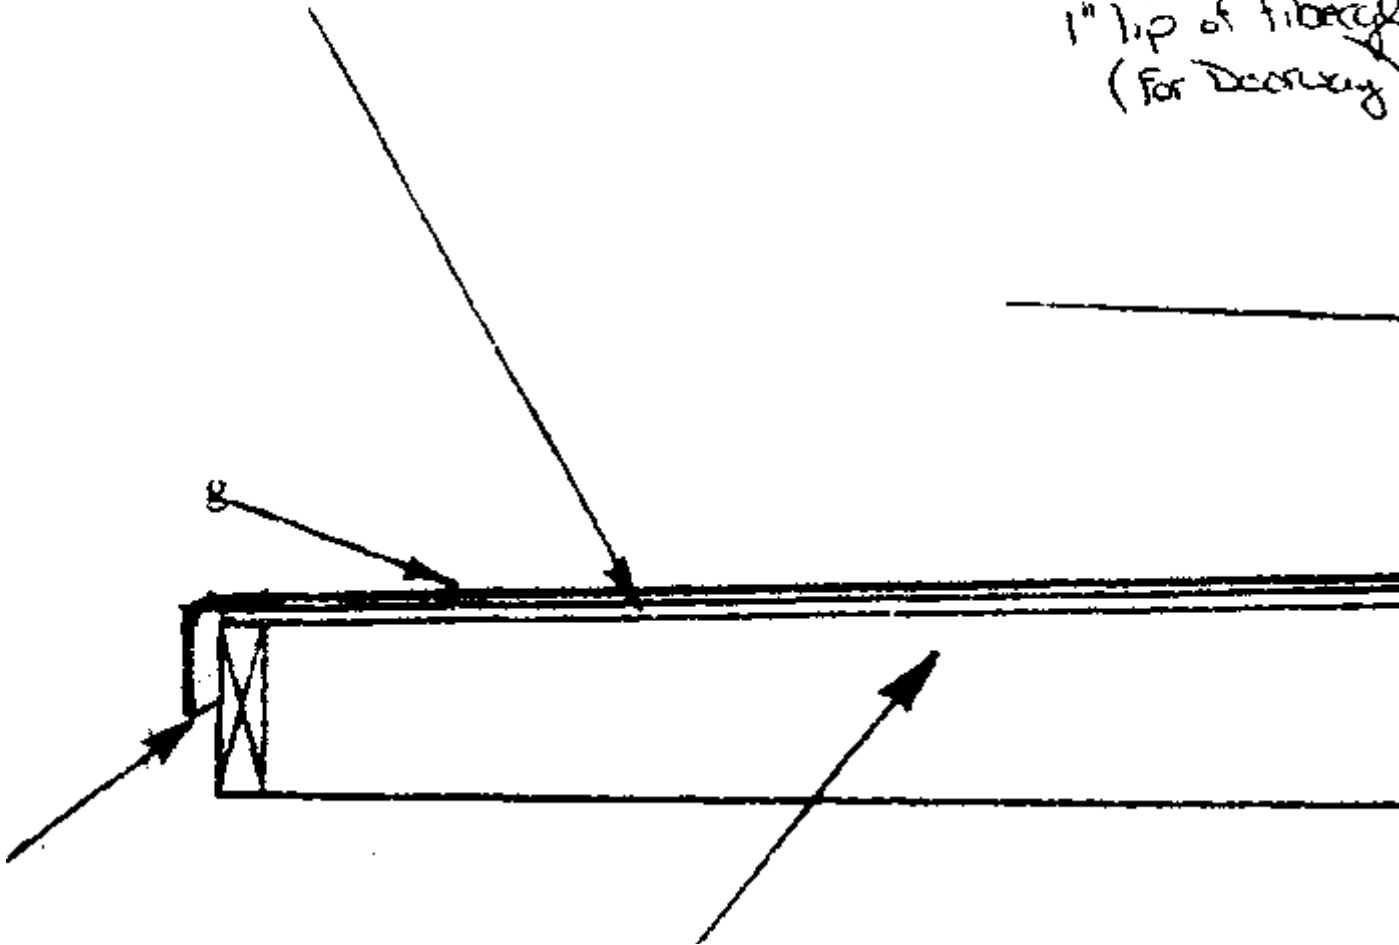

Dry, clean 3/4" tongue and groove a c or b c. plywood (NOTE) DO NOT use c.c a or green pressure treated wood
Remove 8" min of_ existing siding if applicable

fiberglass coat in **VERY IMPORTANT**

1" X 2" OR 1" X 3" Pine with a 45' degree backcut on bottom ^ also, top corner rounded off around perimeter of deck

NO ALUMINUM EDGES!!!

1/2 inch per foot pitch on 16" on center joists

Following these guidelines, we feel will produce the finest possible deck(s).

(NOTES)

Keep plywood clean and dry. and install the same morning we are scheduled to fiberglass

Do not nail to close to plywood seams as this may cause "rosebuds". or wood to splinter

creating bumps and air pockets ; Keep holes, spaces and unevenness to a minimum

Remember .our work will only look as good as your work]

**SUN DECKS SHOWER PANS CHOICE OF COLOR
MAINTENANCE FREE NON-SKID SURFACE WATERPROOF COATING**